SECTION 6
EXPLODED VIEWS

Note:

- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Color Indication of Appearance Parts Example:
  KNOB, BALANCE (WHITE) . . . (RED)
  ↑ Parts Color ↑ Cabinet's Color

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

6-1. CASE SECTION

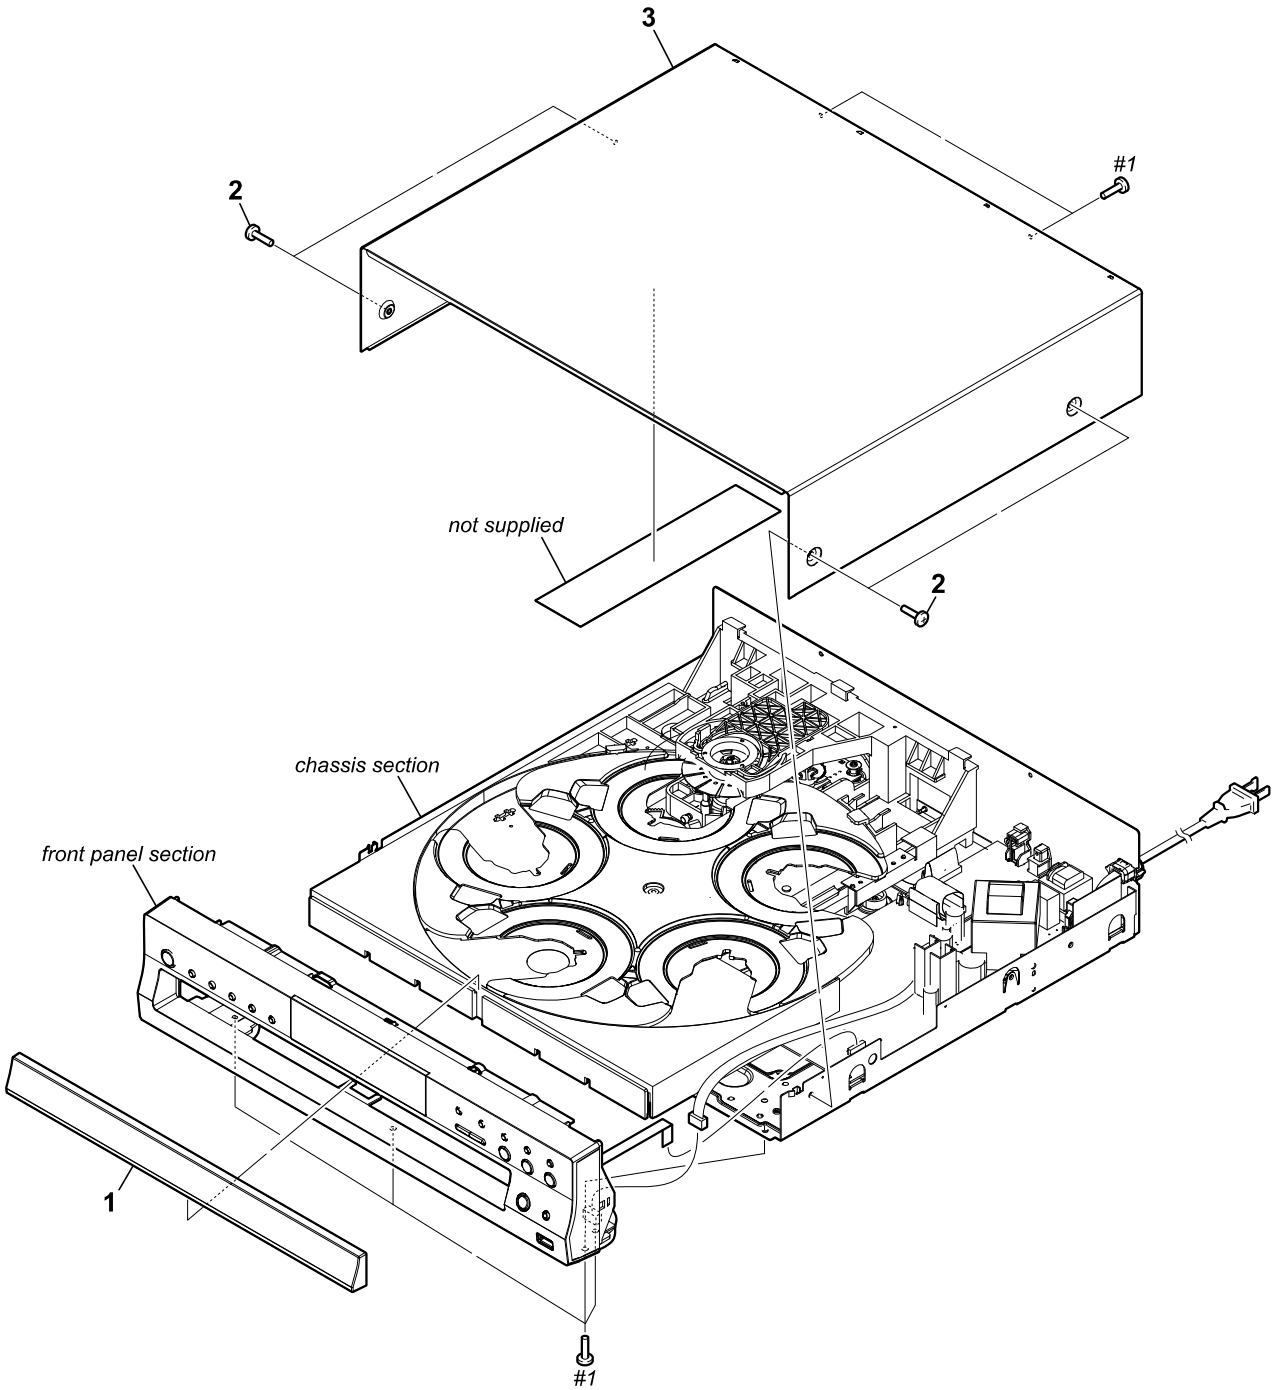

Ref. No.	Part No.	Description	Remark
1	4-198-742-01	PANEL (LOADING 5CDUSB)	
2	3-363-099-02	SCREW (CASE 3 TP2)	
3	4-231-686-11	CASE (409538)	
#1	7-685-646-71	SCREW +BVTP 3X8 TYPE2 IT-3	

6-2. FRONT PANEL SECTION

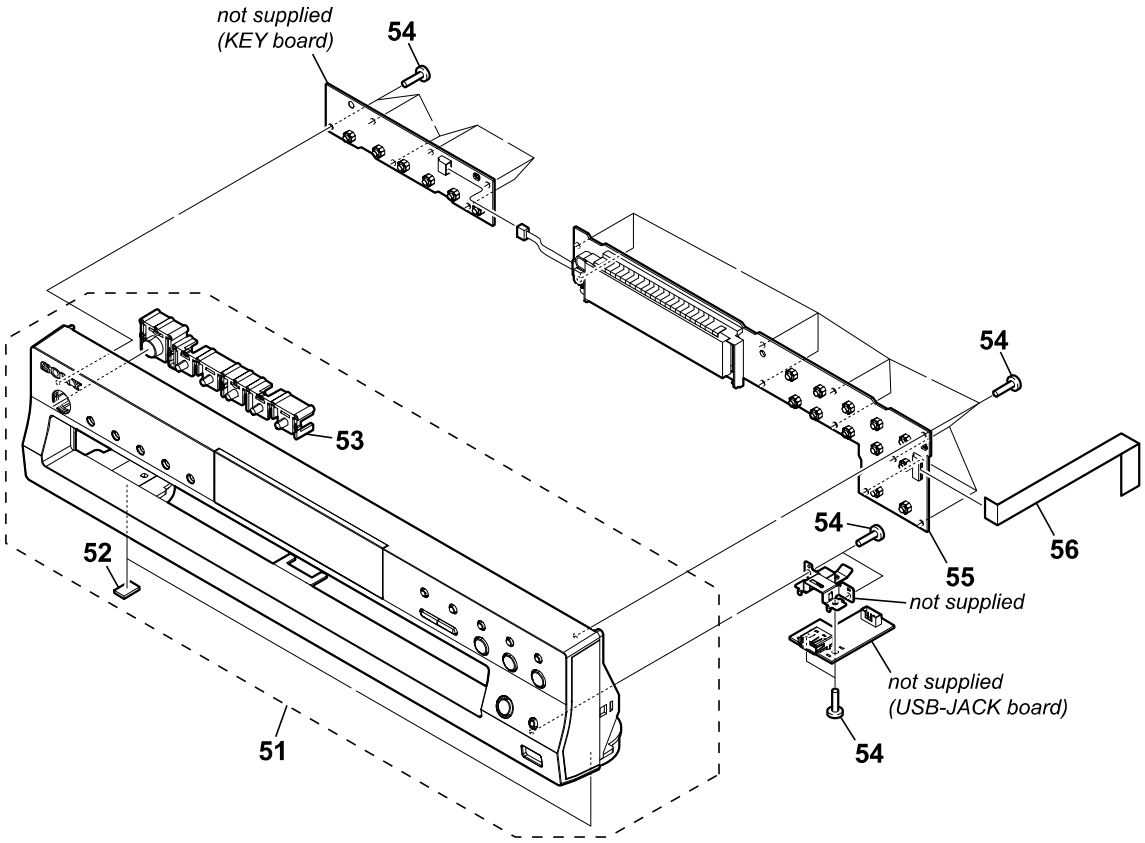

Ref. No.	Part No.	Description	Remark
51	X-2549-034-1	FRONT PANEL ASSY (5CDUSB)	
52	4-977-358-01	CUSHION	
53	4-198-738-01	BUTTON (DISC-POWER) (I/⏻, DISC1, DISC2, DISC3, DISC4, DISC5)	

Ref. No.	Part No.	Description	Remark
54	3-087-053-01	+BVTP2.6 (3CR)	
55	A-1786-279-A	DISPLAY BOARD, COMPLETE	
56	1-828-330-61	WIRE (FLAT TYPE) (13 CORE)	

6-3. CHASSIS SECTION

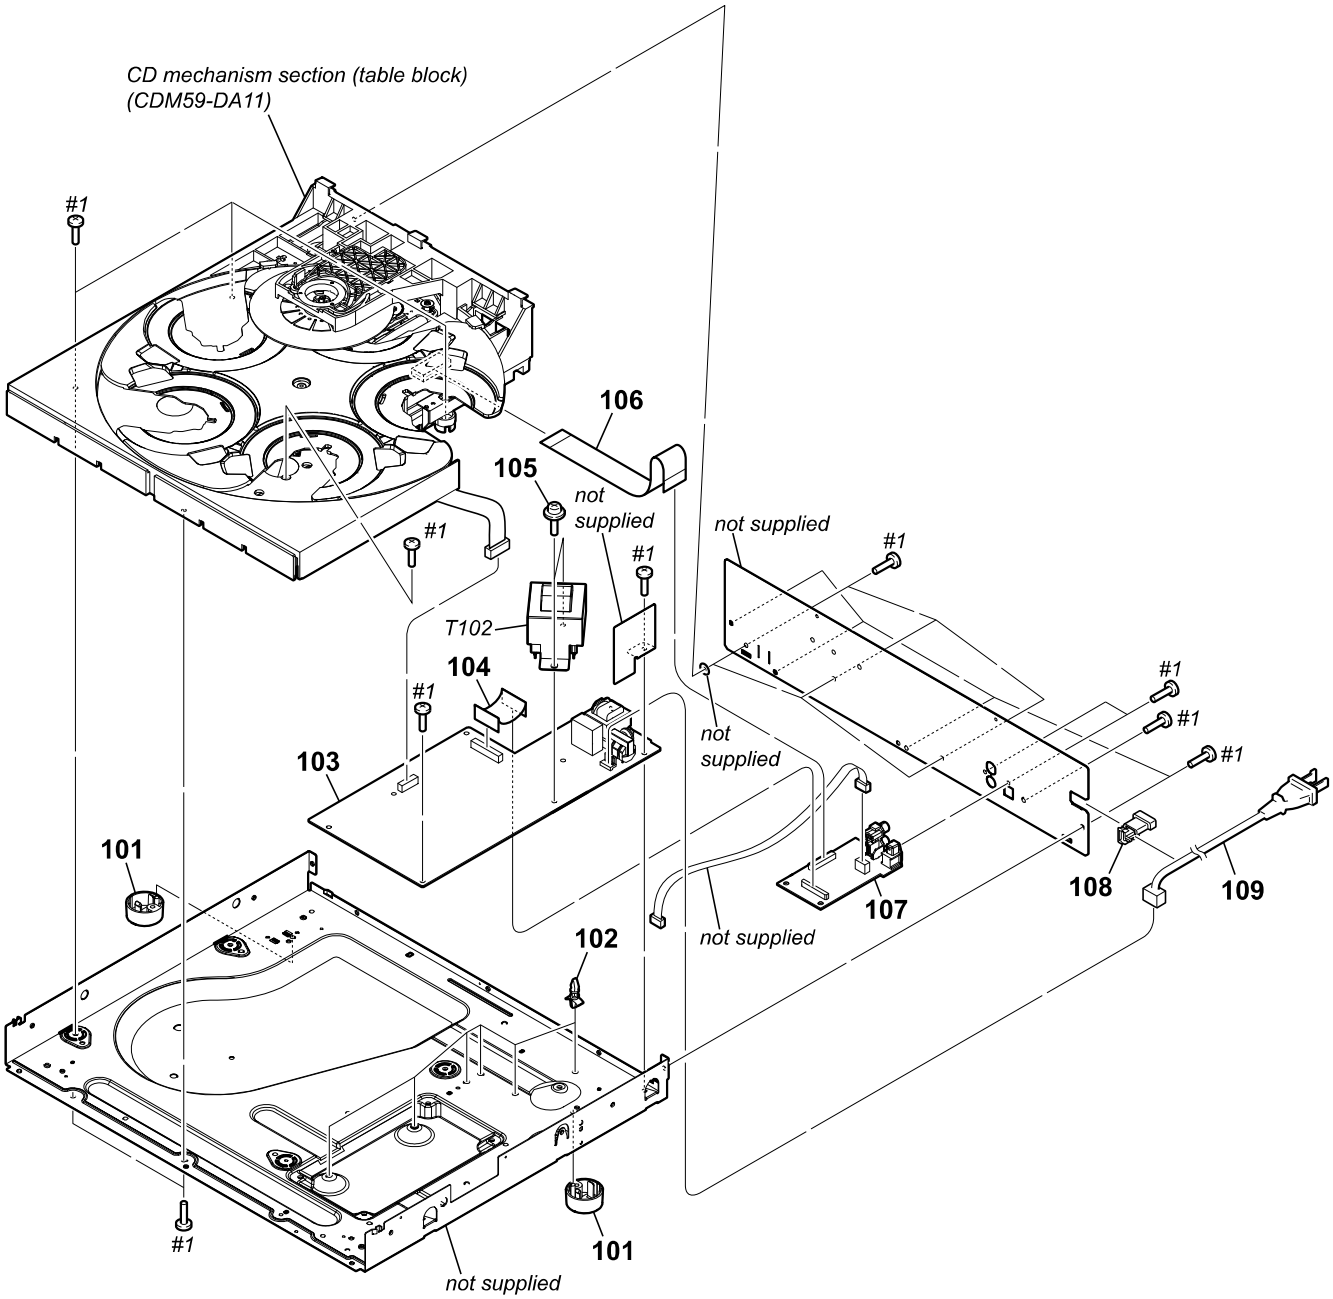

Ref. No.	Part No.	Description	Remark
101	X-4953-448-1	FOOT ASSY	
102	4-943-687-01	HOLDER, PC BOARD	
103	A-1786-278-A	MAIN BOARD, COMPLETE	
104	1-828-396-61	WIRE (FLAT TYPE) (27 CORE)	
105	3-703-249-02	SCREW, S TIGHT, +PTTWH 3X6	
106	1-828-390-61	WIRE (FLAT TYPE) (25 CORE)	
107	A-1786-285-A	USB-AUDIO BOARD, COMPLETE	
⚠ 108	3-113-062-01	CORD BUSH (2104)	
⚠ 109	1-837-308-11	CORD, POWER-SUPPLY	
⚠ T102	1-445-925-11	POWER TRANSFORMER	
#1	7-685-646-71	SCREW +BVTP 3X8 TYPE2 IT-3	

6-4. CD MECHANISM DECK SECTION (TABLE BLOCK) (CDM59-DA11)

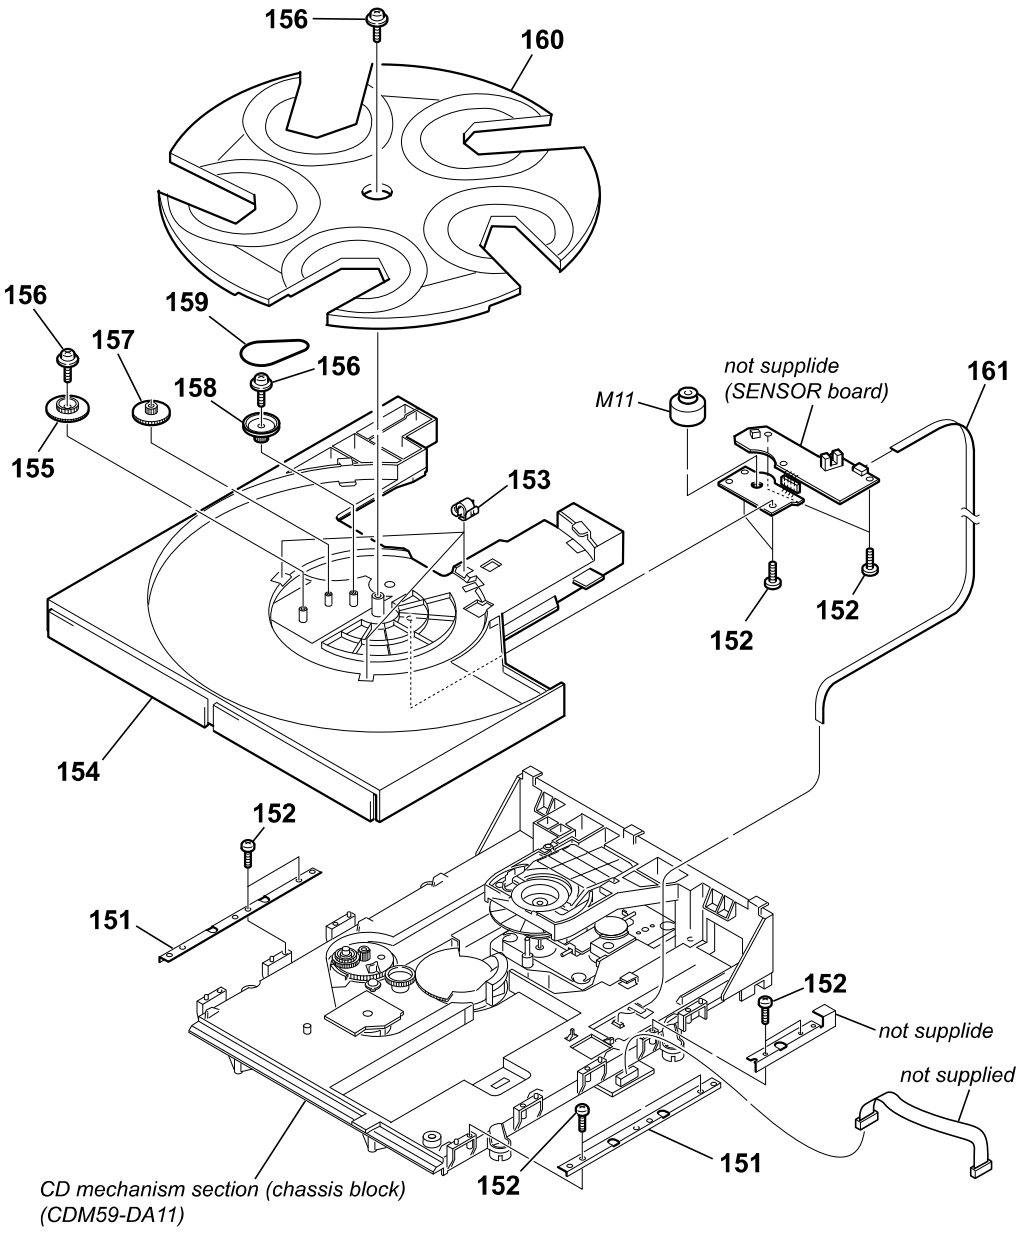

Ref. No.	Part No.	Description	Remark
151	4-224-619-01	BRACKET (GUIDE)	
152	4-218-253-32	SCREW (M2.6), +BTTP	
153	X-4947-960-1	ROLLER ASSY	
154	4-224-602-03	TABLE	
155	4-224-617-01	GEAR (RM-E)	
156	4-218-252-52	SCREW (+PTPWH M2.6), FLOATING	
157	4-224-616-01	GEAR (RM-M)	
158	4-224-615-03	GEAR (RM-B)	
159	4-225-328-01	BELT (ROTARY)	
160	4-224-603-06	TRAY	
161	1-791-930-11	WIRE (FLAT TYPE) (6 CORE)	
M11	A-4735-761-A	MOTOR ASSY, ROTARY (TRAY)	

6-5. CD MECHANISM DECK SECTION (CHASSIS BLOCK) (CDM59-DA11)

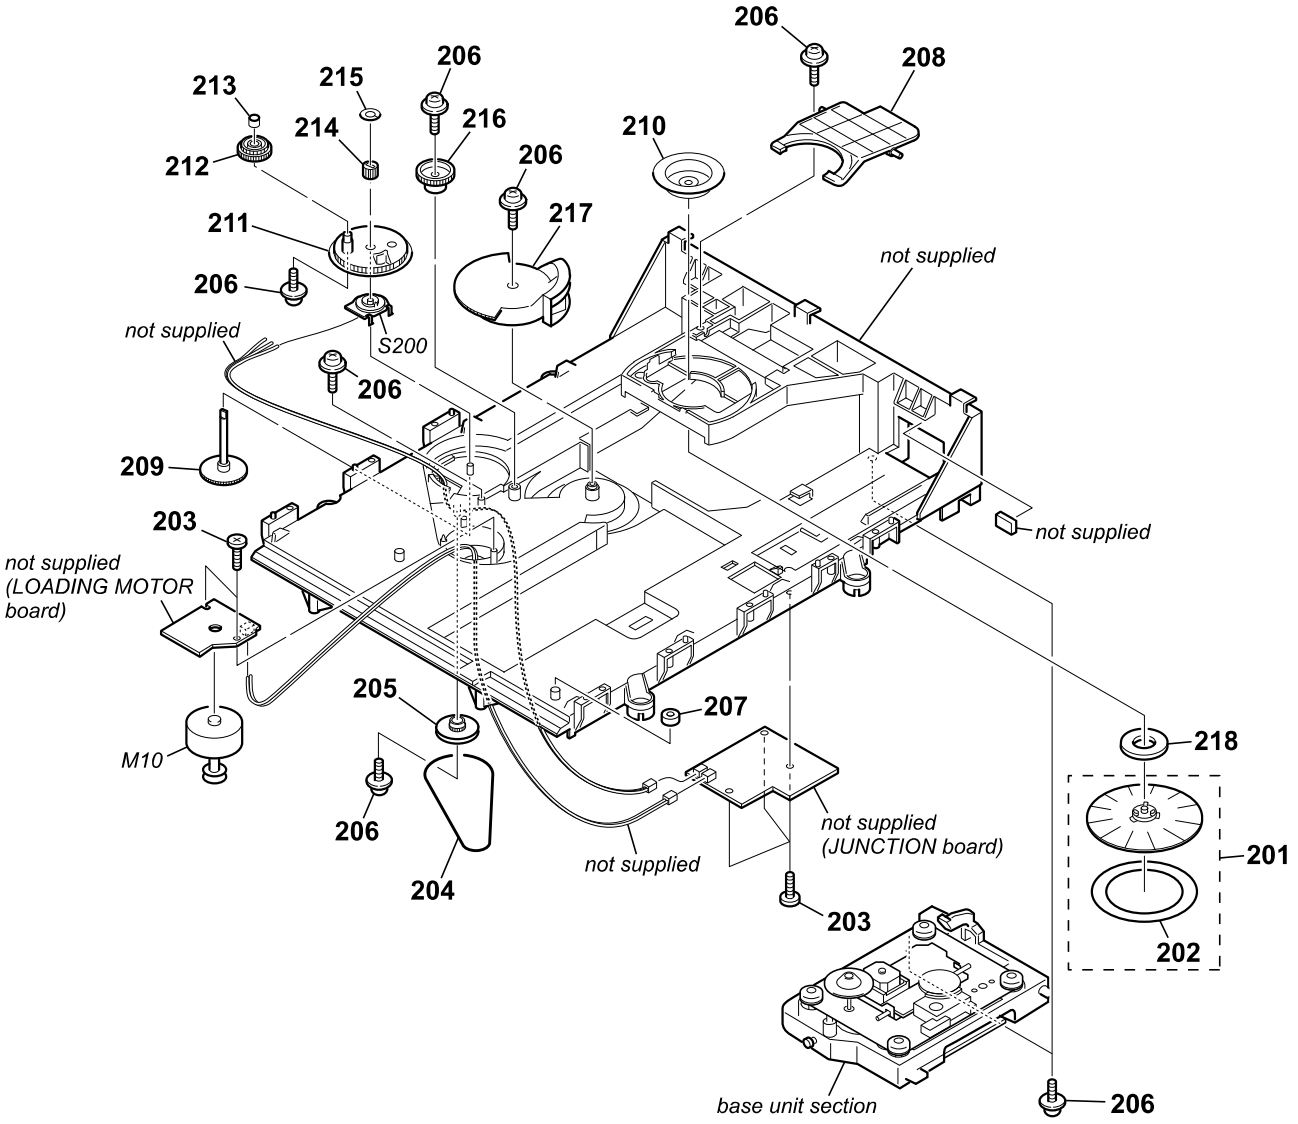

Note: When GEAR (RV), GEAR (U/D) and SWING GEAR are installed, it is necessary to phase it. Please refer to "2-11. GEAR (RV), GEAR (U/D), SWING GEAR" (page 12).

Ref. No.	Part No.	Description	Remark
201	X-2549-868-1	PULLEY, CHUCKING (DA11) ASSY	
202	4-231-777-02	SHEET (KH2)	
203	4-218-253-32	SCREW (M2.6), +BTTP	
204	4-225-885-01	BELT (LOADING)	
205	4-225-844-01	GEAR (LOADING A)	
206	4-218-252-52	SCREW (+PTPWH M2.6), FLOATING	
207	4-951-619-11	CUSHION (A)	
208	4-224-618-01	LEVER (LIFTER)	
209	4-224-613-11	GEAR (SHAFT)	
210	4-221-688-01	PULLEY (B), CHUCKING	
211	4-224-607-01	GEAR, SWING	

Ref. No.	Part No.	Description	Remark
212	4-224-609-01	GEAR (LOADING C)	
213	4-224-608-01	COLLAR, SWING	
214	4-224-611-01	GEAR (LOADING B)	
215	3-016-533-11	WASHER (FR), STOPPER	
216	4-224-606-01	GEAR (RV)	
217	4-224-605-01	GEAR (U/D)	
218	1-471-061-11	MAGNET ASSY	
M10	A-4735-762-A	MOTOR ASSY, LOADING (LOADING)	
S200	1-418-746-11	ENCODER, ROTARY (BU/TABLE ADDRESS DETECT)	

6-6. BASE UNIT SECTION

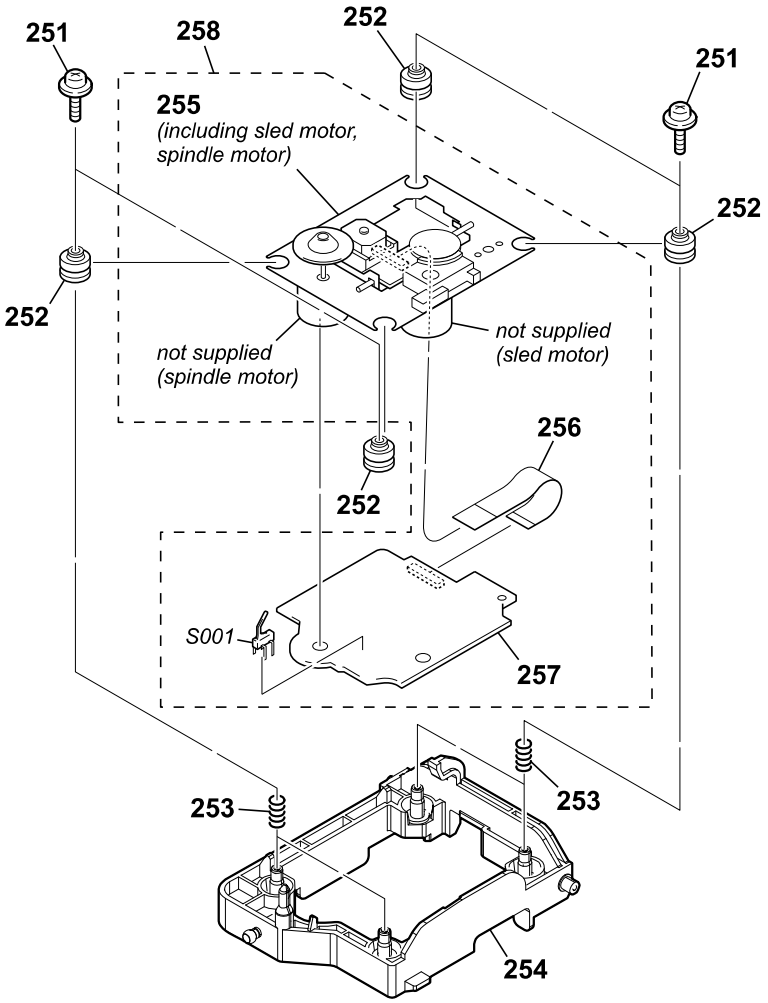

Note: When you install the insulator, please refer to "2-15. BASE UNIT (BU-DA11BD75)" on page 15.

Ref. No.	Part No.	Description	Remark
251	4-985-672-01	SCREW (+PTPWH M2.6), FLOATING	
252	4-227-549-11	INSULATOR	
253	4-227-045-11	SPRING (INSULATOR), COIL	
254	X-2548-321-1	HOLDER (BU DA11) ASSY	
⚠ 255	1-856-037-11	OPTICAL PICK-UP (DA11MMVGP) (Including sled motor, spindle motor)	

Ref. No.	Part No.	Description	Remark
256	1-834-268-21	WIRE (FLAT TYPE) (16 CORE)	
257	A-1786-283-A	BD75 BOARD, COMPLETE	
⚠ 258	A-1786-329-A	BU-DA11BD75	
S001	1-771-853-11	SWITCH, DETECTION (LIMIT)	